



How to change the GH-S blades


Step 1. Reduce the blade tension. Then with a 1.5mm hex wrench, turn the eccentric 180° until the eccentric notch is opposite the tool body notch. The blade control will be lifted so the control pins release the blades.

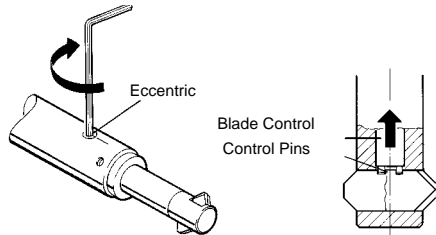


Step 2. Remove the blades from the housing.

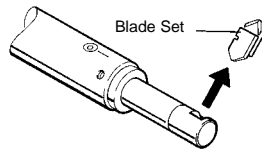


Step 3. Insert the clean new blade set so they are nearly flush with the blade housing. Ensure the notches are in the proper orientation.

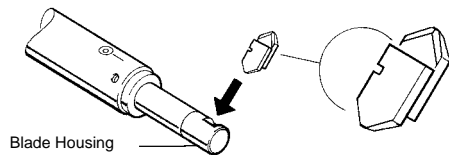


Step 4. Turn the eccentric back towards the tool body notch until a slight resistance is felt. **Do Not Use Force.**

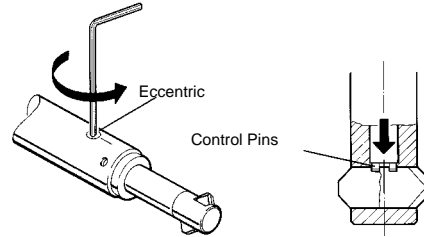

Step 5. Slide one blade then the other until control pins engage the blades. Check that both blades move simultaneously.

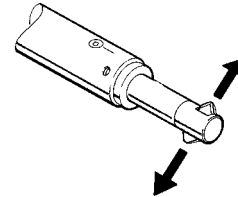

Is There A Quicker Way?

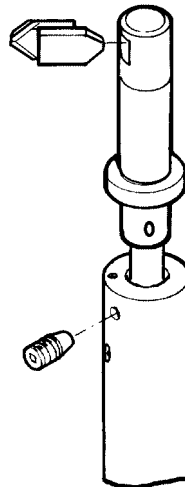

- With a #8 Torx Driver, remove the clamping screw and lift the blade housing.
 - Remove the old blades by pushing them through the window.
 - Turn the blade housing ¼ turn to the right by observing the clamping screw hole in the blade housing and the clamping screw.
 - Insert the new blade set into the blade window so that they are flush with the diameter of the housing.
 - Let the housing down and gently wiggle it back and forth until the control pins engage and the housing sits flush with the tool body. **Do Not Use Force.**
 - Ensure the clamping screw hole is aligned with the clamping screw and tighten the screw with a #8 Torx driver.
- ! The alignment of the clamping screw and the hole in the blade housing is CRITICAL.**

17

HEULE
TOOL CORPORATION

(513) 860-9900
(513) 860-9992

HEULE tools are protected
by international patents.