


How to Change the SNAP blade

Disassembly:

STEP 1:
Push the front of the blade through to the back until it 'snaps' and is sticking out of the back side.

STEP 2:
Push the blade the rest of the way through or grab the back of the blade and pull it the rest of the way out.

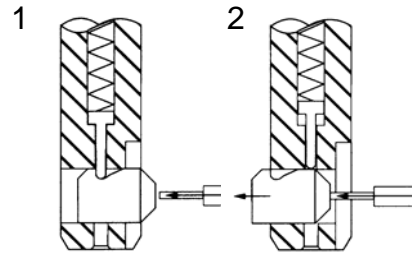

Assembly:

STEP 1:
Place the back side of the new blade into the blade window and push the blade into the window until it 'snaps' into place.

Check that the blade works by pushing the front of the blade in and make sure it pushes back out on its own.

